

Important: If you are not a trained motorcycle mechanic stop now. Ask a local motorcycle shop to do the work for you.


Please take special care!

You have to mount the crash pads one side after the other! At all times you have to prevent that both engine mounting bolts are loose at the same moment!

For tightening torque of engine bolts look at the work shop manual!

Fitting on the right side

(view from rear)

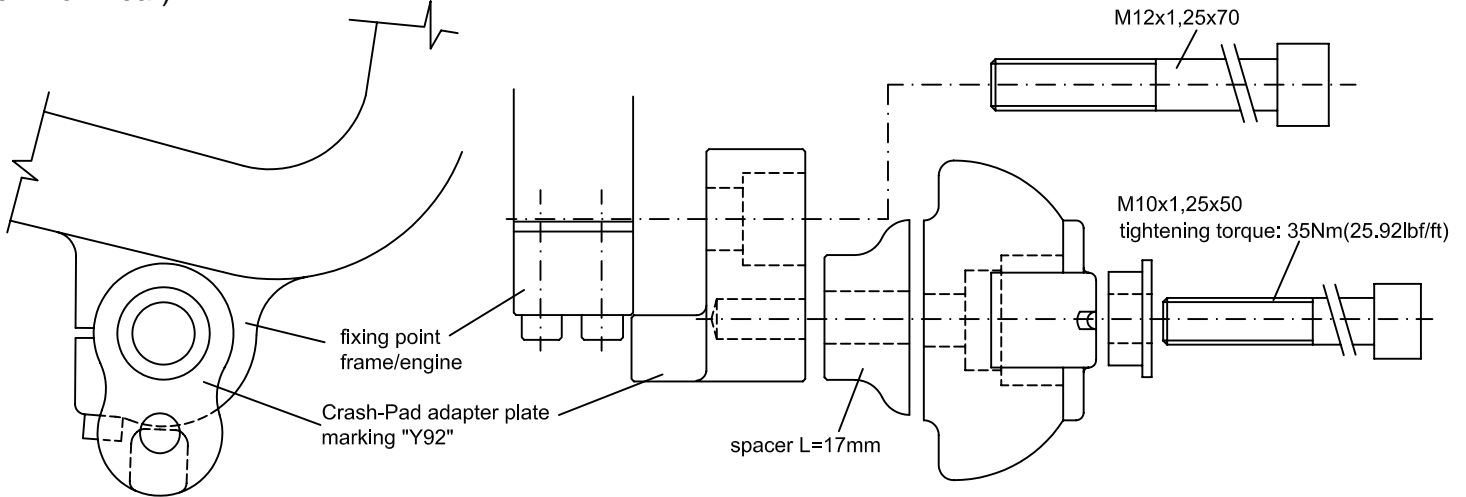

Fitting on the left side

(view from rear)

